

Stair Parts Catalog

Corporate Office 3025 Highway 90 Bronston, Kentucky 42518 Phone: (606) 561-4242 Fax: (606) 561-4379 www.cumberlandtdd.com Thank you for considering Cumberland Millwork & Supply, Inc. for your stair part needs. This brochure introduces you to our stock of stair parts. Poplar and oak are readily available, exotic species are available on a per job quote.


Straight, L-shape, Circular and Spiral Staircase parts are available to fit your special site needs. Please give us a call or come by our showroom to inquire about your Cumberland Millwork & Supply staircase.

"Striving to be the best in interior millwork."

Table of Contents


Post to Post Systems4
Over the Post Systems 6
Starting Steps8
Molding8
Brackets
Rosettes9
Wall Rail Brackets
Plugs & Rail Bolts9
Rails
Treads & Risers
Shoe Rails
Landing Tread
Traditional & Hampton Fittings12
Volutes & Turnouts
Gooseneck Fittings
Square Top Balusters14
Pin Top Balusters
Newels
Box Newels
Pin Top Newels
Handrail Heights

Post to Post Systems

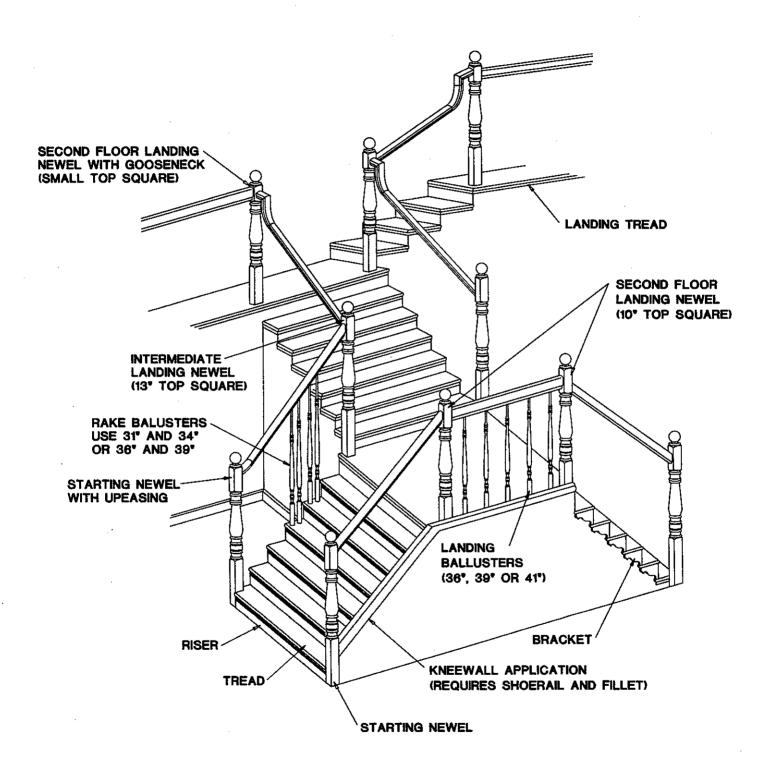

hafanida .	ITEM	GUIDELINES	PAGE NO.
		Support System	<u></u>
1	Treads	Select one tread for each step (except the starting step). For a stair open one side order miter-returned, then refer to the next longer standard length available. For a stair open both sides order mitered both and refer to stringer to stringer measurement (measured outside to outside).	11
2	Risers	Select one riser for each step (except the starting step). Select one more riser than treads per each flight because of landing tread. Landing tread replaces nosing over last riser.	11
3	Landing Tread	Select sufficient lineal footage for the entire balcony and width of stairs at each landing.	11
4	Cove Mold	Select sufficient lineal footage to go under all tread nosing (including miter-returns) and under all landing tread.	8
		Balustrade	·
5	Starting Newel	For a 30" rake rail height, use the shortest available starting newel. For a 34" rake rail height, use the longest available starting newel. Select one for each side with handrail.	15-18
6	Intermediate Landing Newel (Rake to Rake)	Select an intermediate landing newel with 13" face when <u>not</u> using a landing fitting assembly. If a landing fitting is used, select the 5" or 10" face intermediate landing newel	15-18
7	Second Floor Landing Newel (Rake to Level)	Select the 2nd floor landing newel with 10" or 13" face when <u>not</u> using a landing fitting. If a 2nd floor landing fitting is used, use a newel with a 5" or 10" face.	15-18
8	Balcony Newel (On the Level Run)	Match the balcony newel (s) to the 2nd floor landing newel (s). For a run of 10 feet or more, use a newel at the midpoint or every 5 to 6 feet. Place a newel at every corner.	15-18
9	Half Newel or	Select the half-newel of the same style as the other full newels on the balcony. (i.c. 10" face or 5").	15-18
10	Rosettes	Select the rosette for all level or angled run rail connections into a wall.	9
11	Newel Mounting Hardware	Select one of the newel mounting kits for each newel post (if desired)	9
12	Rake Balusters (Open Stairs)	For 30" rail height use 31" for the 1st baluster on the tread and use 34" 2nd baluster on the tread. For 34" rail height use 36" for the 1st baluster and 39" for the 2nd baluster on the tread.	14
13	Rake Balusters (Kneewall Stairs)	Use the 31" or 34" baluster at a rate of 2 per tread. Place on 4" to 6" centers. Subtract one baluster from the calulated total as the starting newel replaces the first baluster.	14
14	Level Run Balusters	Use the 36" or 39" baluster for all level runs/balconies. Place on 4" to 6" centers. Subtract one baluster from the calculated total to account for the end of the run. Subtract one baluster for each newel post on the level run. Do not however, subtract one for the newel post beneath the landing fitting at the 2nd floor landing.	14
15	Handrail	Select handrail at a rate of 13" per each tread and include enough for all level runs.	10
16	Shoerail (Kneewall-Rake)	Select shoerail at a rate of 13" per each tread.	11
17	Shoerail (Level Runs)	Select shoerail to cover all balcony landing tread (if desired).	11
18	Fillet	Select enough fillet to fill all plowed handrail and all shoerail.	11
19	Plugs	Select two wood plugs for every newel (depending on installation requirements).	9
20	Hardware	Select one Dowel-Fast double-end wood screw for each baluster. this is optional, but highly recommended. Double-end wood screws are not needed for balusters installed within shoerail.	9
21	Brackets (Open Stairs)	Select one bracket for each tread (if desired).	9

Over the Post Systems

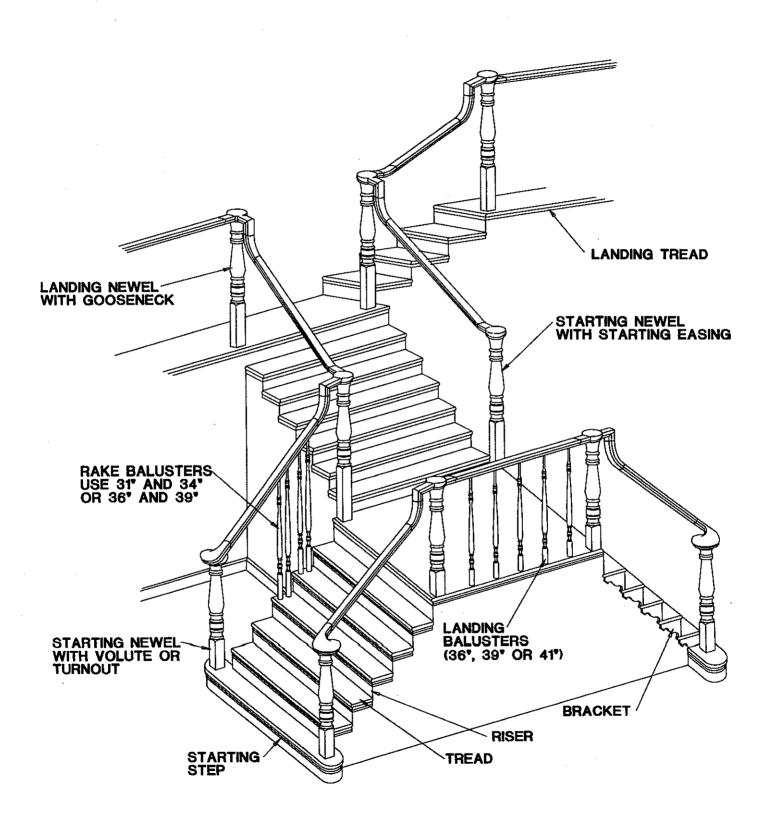


	ITEM	GUIDELINES	PAGE NO.
	T	Support System	<u> </u>
1	Starting Step	For use with volutes and turnouts. Select for bullnose on one or both ends. Measure finished stringers from outside to outside.	8
2	Treads	Select one tread for each step (except the starting step). For a stair open one side order miter-returned, then refer to the next longer standard length available. For a stair open both sides order mitered both and refer to stringer to stringer measurement (measured outside to outside).	11
3	Risers	Select one riser for each step (except the starting step). Select one more riser than treads per each flight because of landing tread. Landing tread replaces nosing over last riser.	11
4	Landing Tread	Select sufficient lineal footage for the entire balcony and width of stairs at each landing.	11
5	Cove Mold or Scribe Mold	Select sufficient lineal footage to go under all tread nosing (including miter-returns) and under all landing tread.	8
		Balustrade	
6	Starting Fitting	Select either a volute turnout, or starting easing w/cap.	12
7	Starting Newel	Use everywhere except at the intermediate landing corner of an L-shaped stair.	19
8	Intermediate Landing Newel	Use the intermediate landing newel at the intermediate landing corner of an L-shaped stair.	19
9	Level Run Newel	If the balcony is 10 feet or longer, use the starting newel every 5 or 6 ft. under a tandem cap. Place a newel at every corner under a quarterturn with cap. Use the 50"landing newel if the newel is to extend below the 2nd floor surface.	19
10	Half Newel or	Select the half-newel of the same style as the other full newels on the balcony.	19
11	Rosettes	Select a round rosette for all level run rail connections into a wall.	9
12	Newel Mounting Hardware	Select one of the newel mounting kits for each newel post (if desired).	9
13	Balusters for Volutes and Turnouts	Volutes require 4 or 6 - 1 1/4" or 4-1 3/4" balusters. Tutnouts require 2- 1 1/4" or 1 -1 3/4"Balusters. For 30" rail height use 36" Baluster under Volutes. For 34" rail height use 41" Balusters under volutes.	14
14	Balusters for Starting easing With Cap (Open Stairs)	Use 1-36" Baluster for 30" rail height, or use 1-39" Baluster for 34" rail height.	14
15	Rake Balusters (Open Stairs)	For 30" rail height use 31" for the 1st. Baluster on the tread and use 34" 2nd. Baluster on the tread. For 34" rail height use 36" for the 1st. Baluster and 39" for the 2nd. Baluster on the tread.	14
16	Rake Balusters (Kneewall Stairs)	Use the 31" or 34" baluster at a rate of 2 per tread. Place on 4" to 6" centers. Subtract one baluster from the calculated total as the starting newel replaces the first baluster.	14
17	Level Run Balusters	Use the 36" or 39" baluster for all level runs/balconies. Place on 4" to 6" centers. Subtract one balaster from the calculated total to account for the end of the run. Subtract one balaster for each newel post on the level run. Do not however, subtract one for the newel post beneath the landing fitting at the 2nd. floor landing.	14
18	Handrail	Select Handrail at a rate of 13" per each tread and include enough for all level runs.	10
19	Handrail Fittings (Landing Fittings)	Match each corner of the floor plan to a corresponding plan on pages 12-13 of the systems catalog. Specify each landing fitting needed to construct the landing fitting.	12-13
20	Handrail Fittings (Over half-newel)	Select the opening cap which corresponds to the rail to cover each half-newel (i.e6010 requires -7019). This will be cut on the job.	12-13
21	Handrail Fittings (Miscellaneous)	Each newel or half-newel must be covered with a fitting. Select the fittings from the drawings on pages 12-13 of the systems catalog.	12-13
22	Shoerail (Kneewall-Rake)	Select shoerail at a rate of 13" per each tread.	11
23	Shoerail (Level Runs)	Select shoerail to cover all balcony landing tread (if desired).	1
24	Fillet	Select enough fillet to fill all plowed handrail and all shoerail.	11


Starting Steps

For use with VOLUTES and TURNOUTS.


Specifications: Treads 1-1/32" x 16-1/4". Total Rise 8-1/32". Riser 3/4" x 7".

For use with all handrails with VOLUTES or TURNOUTS.

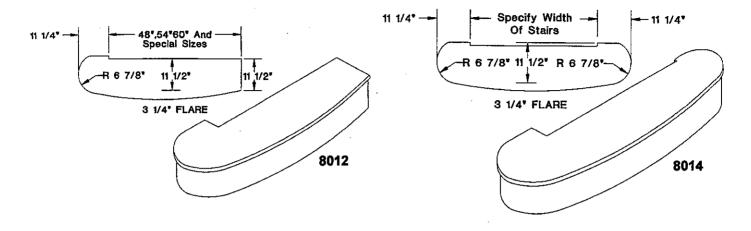


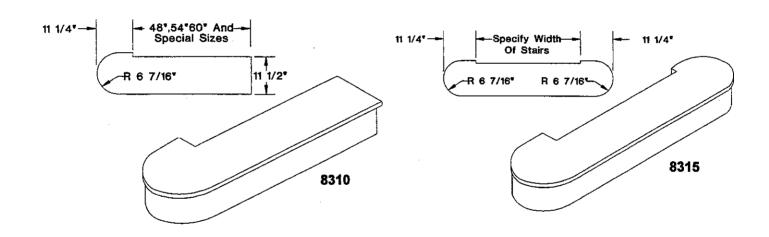

Molding

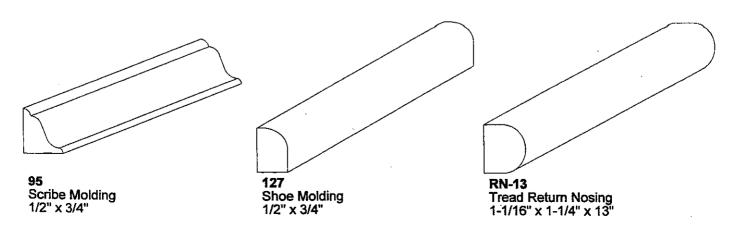


Brackets

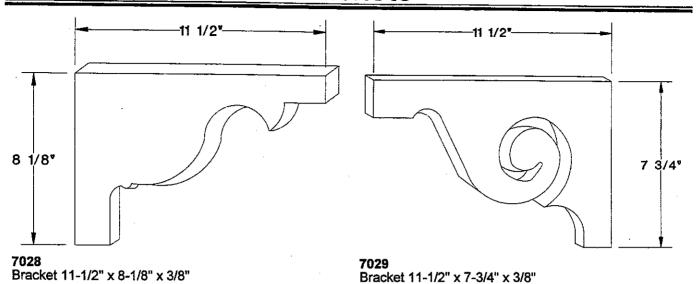


Rosettes


Wall Rail Bracket

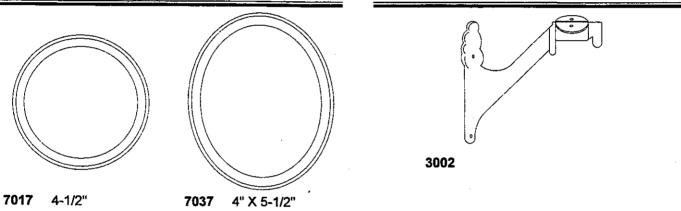


Plugs & Rail Bolts

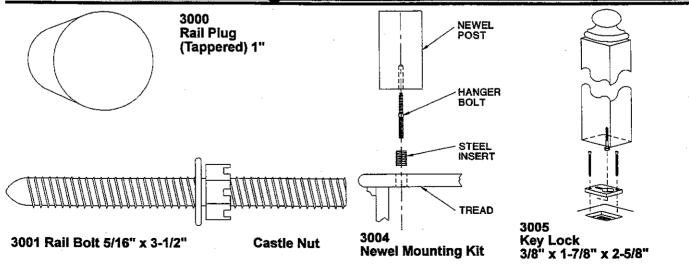


Rails

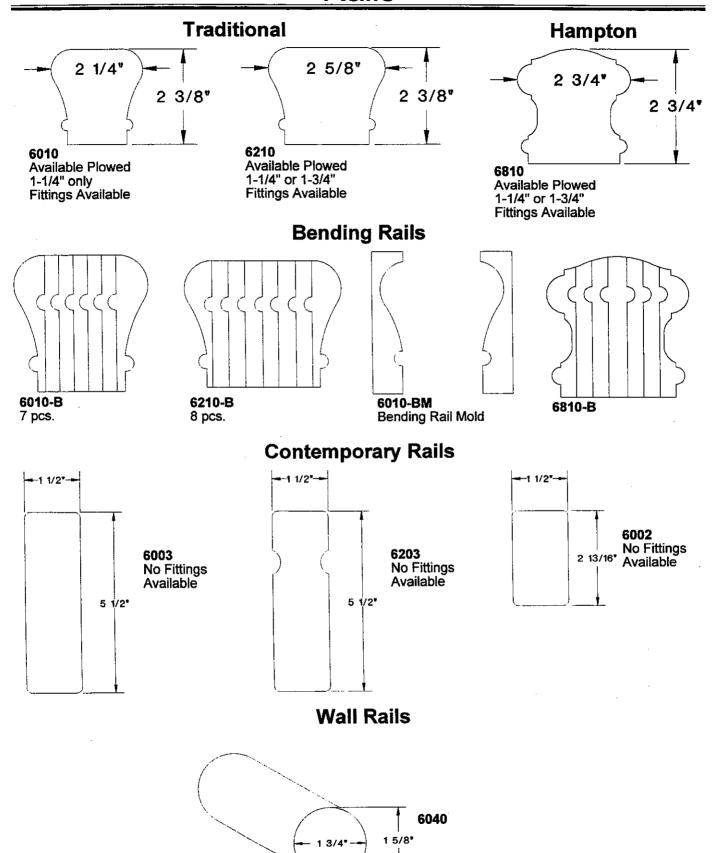

Treads and Risers

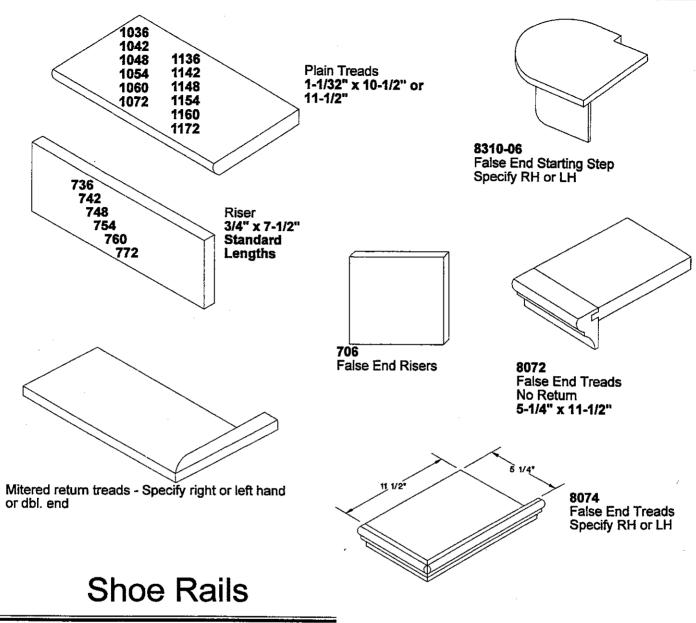


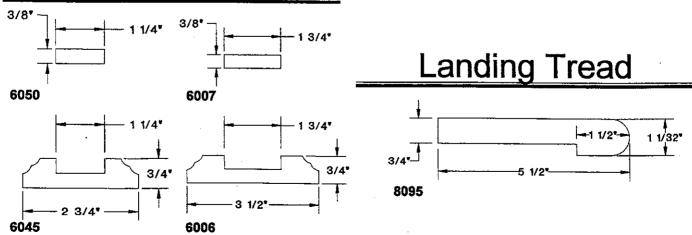


Traditional & Hampton Fittings

6010, 6210 rails.

The matching fittings for any handrail will have an identical second digit. For example: 6010 matches 7030.

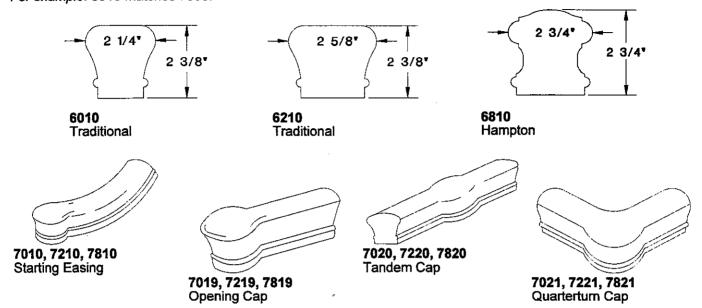


Volutes & Turnouts

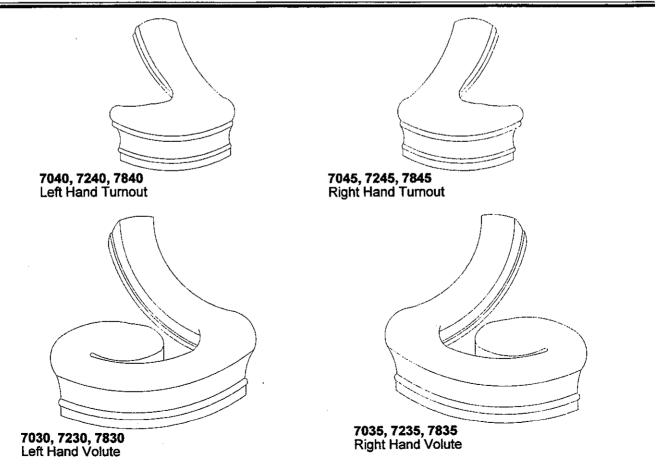


Gooseneck Fittings

(Use with a Newel)

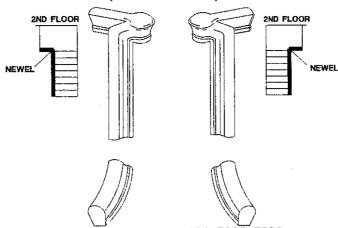


7081, 7281, 7881Left Hand 2-Riser with Cap

7086, 7286, 7886 Right Hand 2-Riser with Cap

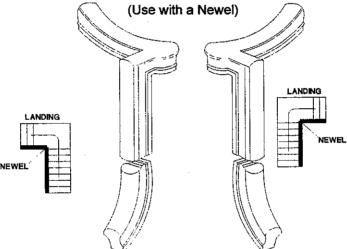


7060, 7260,7860 Left Hand 2-Riser with Cap

7065, 7265, 7865Right Hand 2-Riser with Cap

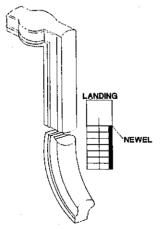


7089, 7289, 7889 Straight 2-Riser with Tandem Cap

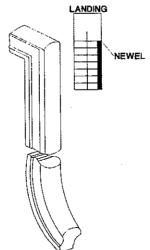


7099, 7299, 7899 Straight 2-Riser No Cap

Square Top Balusters

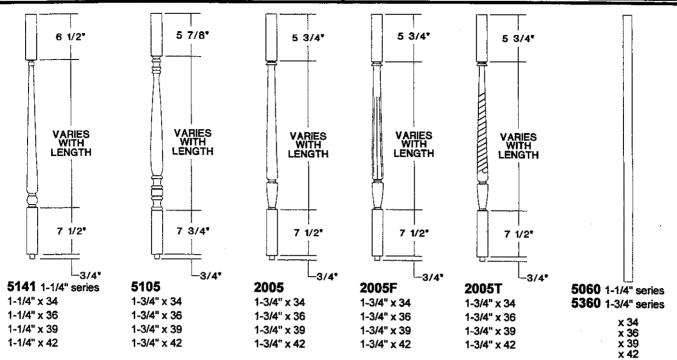


^{* 42&}quot; Bottom Square is Larger


Pin Top Balusters

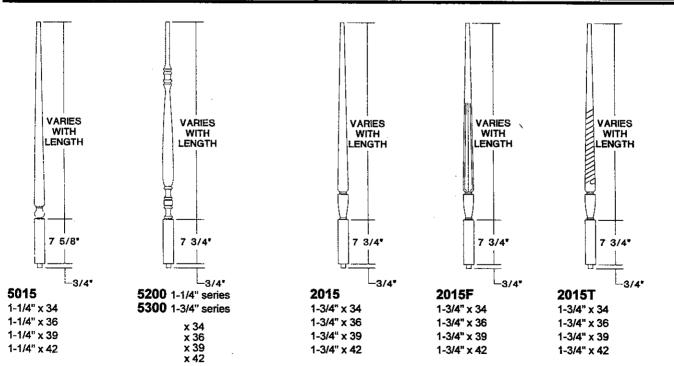



* 42" Bottom Square is Larger


Newels

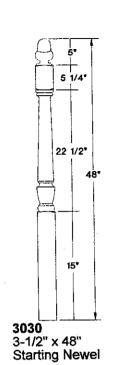


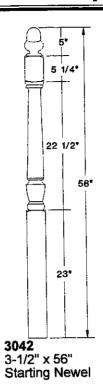


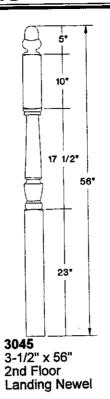

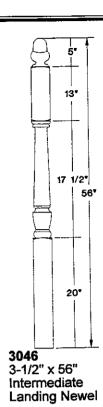


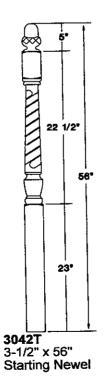


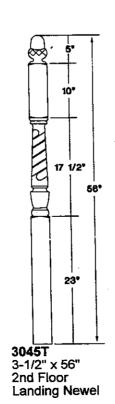


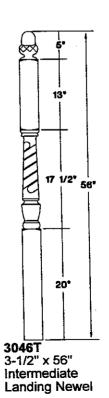



Newels

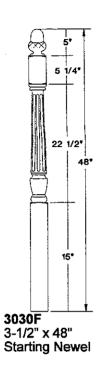


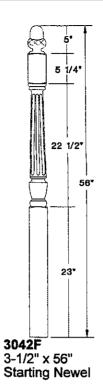


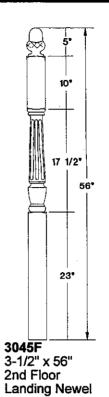


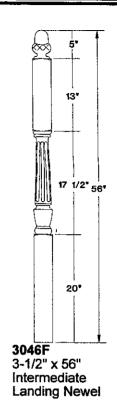

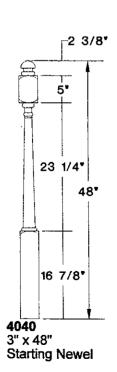


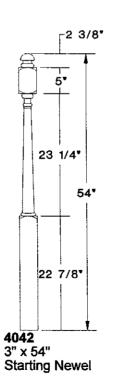


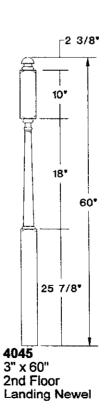


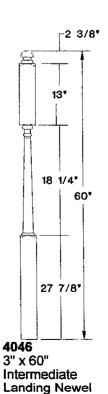



Newels

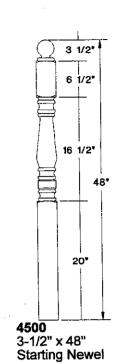


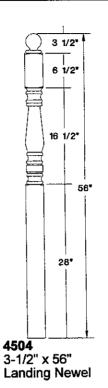


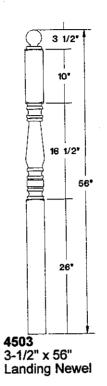

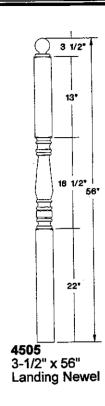


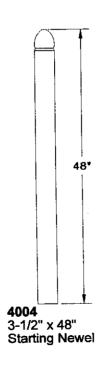


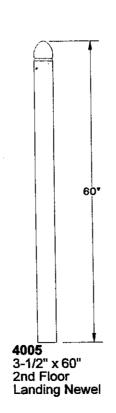

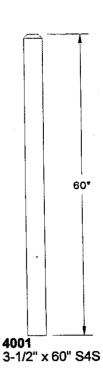



Box Newels

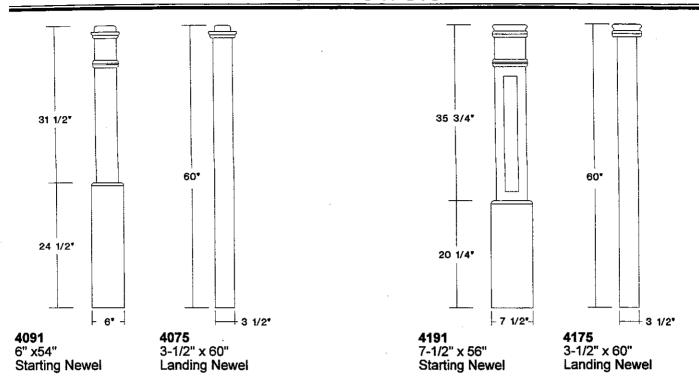

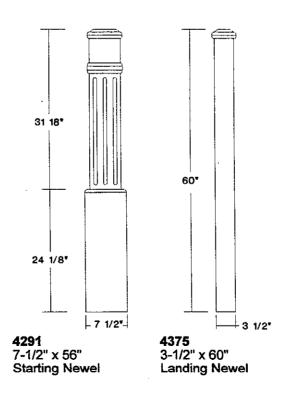


Pin Top Newels

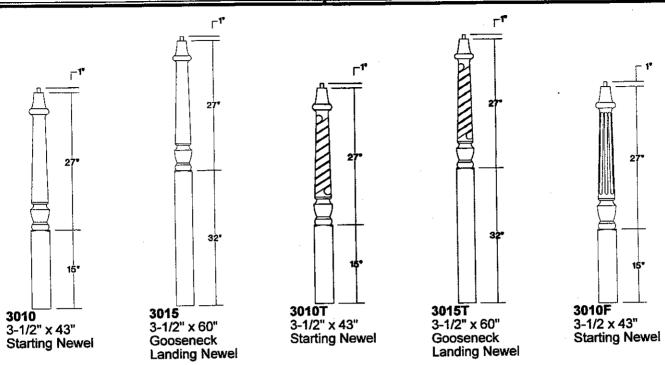

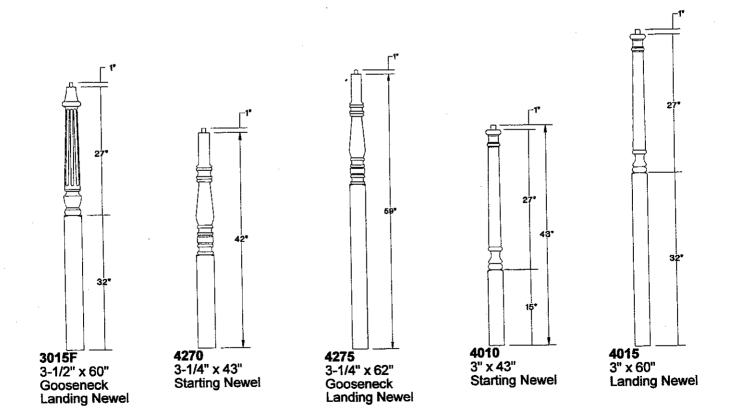

Suggested Parts for Different Handrail Heights

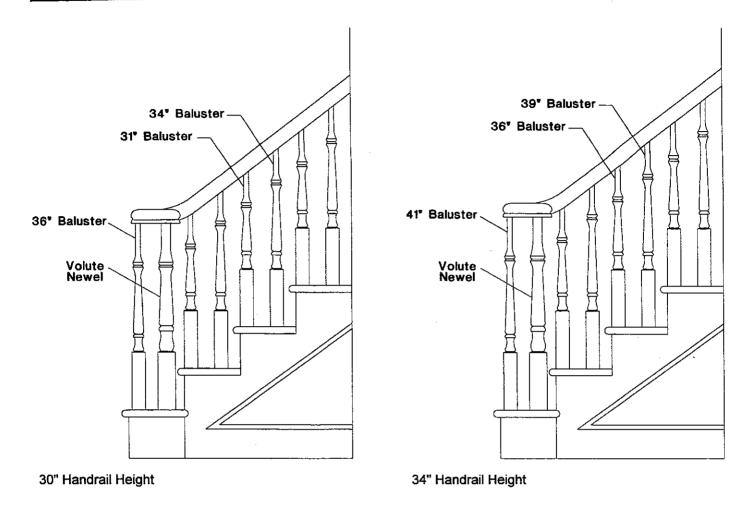

The illustration shown above is merely a suggestion on the parts needed to reach the desired rail height. Local code compliances should be researched before ordering parts for your stairway.